


ΕN

Wood-based Panel Board Bunker & Scaling belts

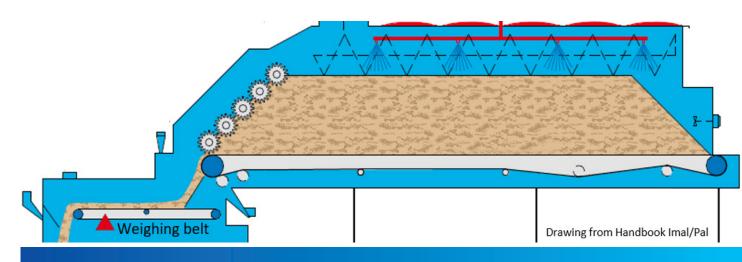

The Silam EZP 8/1 0+01 red HR can be installed without disassembling the machine; thus saving a lot of time. In addition the silicone impregnation is less sticky than the PVC/PU alternatives used.

A weighing belt should have no tolerances. In the frame there is very little space to splice the belt endless.

For this reason, the frame is taken out of the machine, the belts get spliced and the frame is re-installed.

This process typically takes 2-4 people up to 8 hours.

Belts used for bunkers are:

514471	Flexam EM 12/2 00+07 dark green M1 AS FG
513284	Flexam EX 15/3 0+10 black M2 AS FR
574601	Flexam EX 10/2 0+05 black M2 AS FR

Belts used for belt scales (weighing):

583060 Silam EZP 8/1 0+01 red HR / 6mm













Expert advice and quality solutions for all your belting needs.

ammeraalbeltech.com

Ammeraal Beltech P.O. Box 38 1700 AA Heerhugowaard The Netherlands

T +31 (0)72 575 1212 info@ammeraalbeltech.com

ammega.com