


9100 ACTIVE TRANSFER SYSTEM


Left Transfer

TL

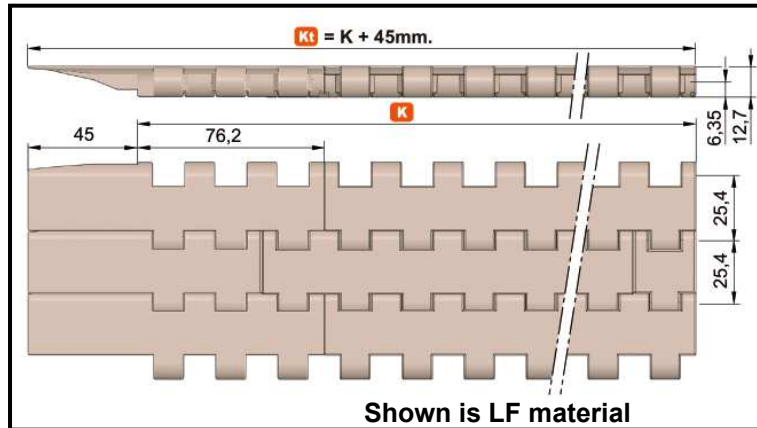

Right Transfer

TR

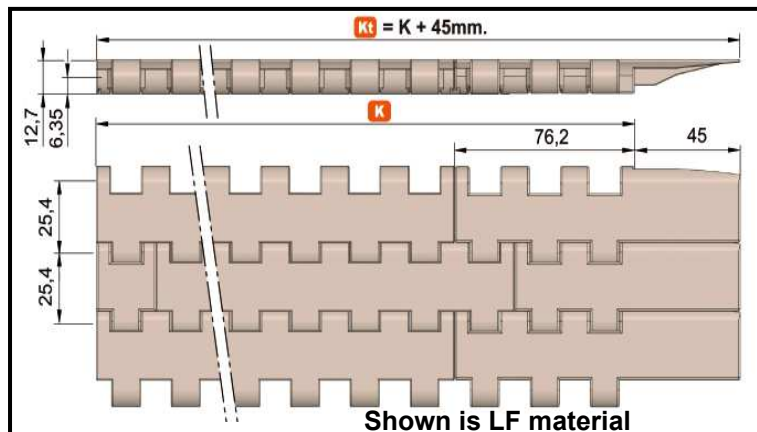

COD.

K

mm inch

COD.	K	
	mm	inch
**910003TL	76,2	3
**910006TL	152,4	6
**910009TL	228,6	9
**910012TL	304,8	12
.....		
**910057TL	1447,8	57
**910060TL	1524	60

COD.

K

mm inch

COD.	K	
	mm	inch
**910003TR	76,2	3
**910006TR	152,4	6
**910009TR	228,6	9
**910012TR	304,8	12
.....		
**910057TR	1447,8	57
**910060TR	1524	60

Guides

Measures of available guide rails positions




Code according to quantity and position of the guide rail





Transfer

TL

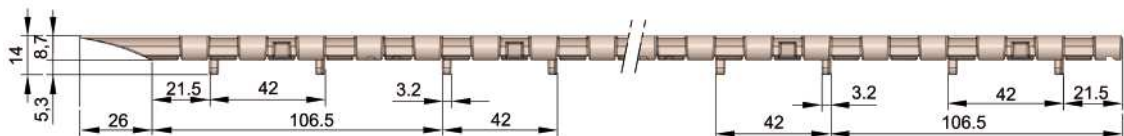

TR

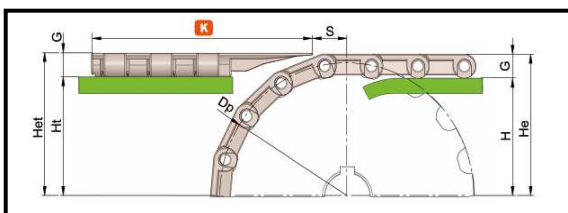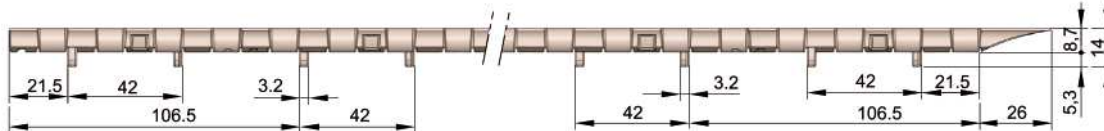

Series	G	Z	Ø De	Ø Dp	H	He	Ht	Het	S	K
9100	12,7	7	59	58,55	22,9	35,6	23,4	36,1	9,1	121,2
		9	75	74,27	30,8	43,5	31,3	44,0	10,0	
		11	90	90,14	38,7	51,4	39,2	51,9	10,9	
		13	106	106,15	46,7	59,4	47,2	59,9	11,7	
		15	122	122,17	54,7	67,4	55,2	67,9	12,5	
		17	139	138,23	63,3	76,0	63,8	76,5	13,3	

Remarks

- LF Standard Production
- Other materials available under request
- Other widths are available in increases of 3"
- There is an option for the active lateral transfer to from part of the belt or to be individually attached to it